



Tabela elementów zmiennych

| Napęd | Szafa | Odpyw | Listwy krosowe               | 3X-1   | 3X-2  | 3X-3  | 3X-4  | 3X-5  | 3X-6  | 1X-B2/B3             | 1X-C2    | 1X-C3    | sterownik |
|-------|-------|-------|------------------------------|--------|-------|-------|-------|-------|-------|----------------------|----------|----------|-----------|
| ZE1.1 | R14   | =14   | 1X/ZE1.1; 2X/ZE1.1; 3X/ZE1.1 |        | XS-37 | XS-36 | XS-34 | XS-33 | XS-35 | K02.2-14<br>K02.2-14 | K02.2-11 | K02.2-11 | S14       |
| ZE1.2 | R14   | =15   | 1X/ZE1.2; 2X/ZE1.2; 3X/ZE1.2 |        | XS-42 | XS-41 | XS-39 | XS-38 | XS-40 | K01.2-14<br>K01.3-14 | K03.1-11 | K03.0-11 | S14       |
| ZE1.3 | R14   | =16   | 1X/ZE1.3; 2X/ZE1.3; 3X/ZE1.3 |        | XS-47 | XS-46 | XS-44 | XS-43 | XS-45 | K03.2-14<br>K03.3-14 | K03.3-11 | K03.2-11 | S14       |
| ZE1.4 | R14   | =17   | 1X/ZE1.4; 2X/ZE1.4; 3X/ZE1.4 |        | XS-52 | XS-51 | XS-49 | XS-48 | XS-50 | K04.0-14<br>K04.1-14 | K04.1-11 | K04.0-11 | S14       |
| ZN1   | RP    | =16   | 1X/ZN1; 2X/ZN1; 3X/ZN1       | XS-107 | XS-78 | XS-77 | XS-75 | XS-74 | XS-76 | K01.4-14<br>K01.5-14 | K01.5-11 | K01.4-11 | SP        |
| ZN2   | RP    | =17   | 1X/ZN2; 2X/ZN2; 3X/ZN2       | XS-107 | XS-83 | XS-82 | XS-80 | XS-79 | XS-81 | K01.6-14<br>K01.7-14 | K01.7-11 | K01.6-11 | SP        |
| ZN3   | RP    | =18   | 1X/ZN3; 2X/ZN3; 3X/ZN3       | XS-108 | XS-88 | XS-87 | XS-85 | XS-84 | XS-86 | K01.8-14<br>K01.9-14 | K01.9-11 | K01.8-11 | SP        |
|       |       |       |                              |        |       |       |       |       |       |                      |          |          |           |